

INSTALLATION INSTRUCTIONS

SERVICE KIT - PRESSURE VESSEL REPLACEMENT KIT. Part Nos. 27787

- Jet Boostamatic, PH Boostamatic, CH Boostamatic & Kennet Boostamatic

- Monsoon Universal
- KIT CONTENTS ITEM QTY ITEM 1 Pressure Vessel 1 3 'O'-Ring

QTY 1


- 2 ¹/₂ " BSP Rubber Washer
- DISASSEMBLY
 - Before starting work on the pump ensure the electrical supply is isolated and the water supply to and from the pump is turned off.


1

- Rotate the pressure vessel as shown to unscrew (Figs. 1, 2 & 3).
- Remove 'O'-ring or rubber washer from manifold body (Figs. 4 & 5).



Damaged components must be replaced. Contact Stuart Turner for advice on replacements not supplied with kit.

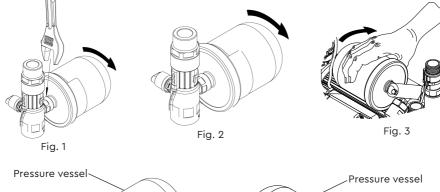

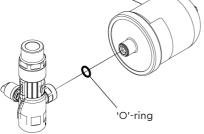

Pressure vessel


Fig. 4

Fig. 5

REASSEMBLY

Reassembly is the reverse of the disassembly instructions with the new replacement parts fitted as required.

Engage vessel screw thread and tighten as shown to confirm a secure hand tight connection (Figs. 7 & 8). A spanner can be used if required to nip tight to 5–6 Nm torque (Fig. 6).

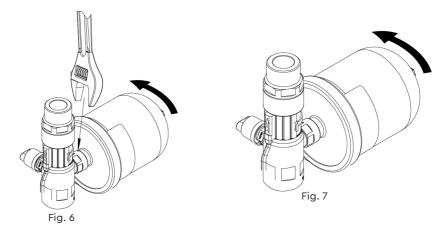

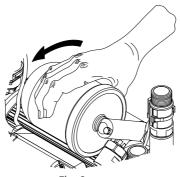


Fig. 8

INITIAL OPERATING INSTRUCTIONS

- Consult instruction manual for commissioning instructions.
- Do not run pump dry. Allow the water to be pumped to enter the pump body thus ensuring the seal is lubricated before switching the pump on. Failure to do this will damage the seal.
- Carefully check pump and pipework for leaks whilst pump running and stationary before leaving the installation unattended.

Stuart Turner Limited reserves the right to amend specifications without notice.



Stuart Turner Ltd, Henley-on-Thames, Oxfordshire RG9 2AD ENGLAND Tel: +44 (0) 1491 572655, Fax: +44 (0) 1491 573704 info@stuart-turner.co.uk www.stuart-turner.co.uk

Pt. No. 19078

Issue No: 1420/2-05